


Hemisphere GNSS AtlasLink/A101/A325 Wiring

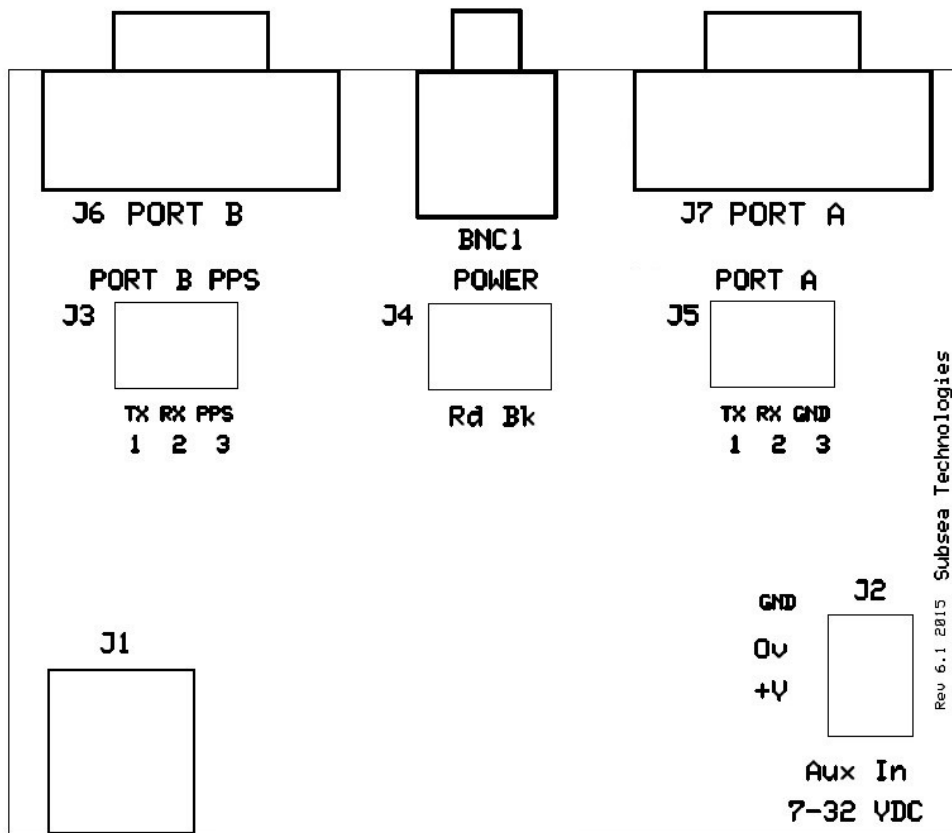

J5 - Port A Terminal Block
1 - RS232 TX - violet
2 - RS232 RX - pink
3 - Signal ground - yellow

J4 - V102 Power Terminal Block
Rd - +V - red
Bk - 0V - black

J3 - Port B Terminal Block
1 - RS232 TX - brown
2 - RS232 RX - blue
3 - PPS(+) - gray

J2 - Aux Power In Terminal Block
0V
+V 7-32vdc input